



PROGRAMMING YOUR REMOTE

Remotes are programmed to operate Bernard Telephone Set Top Boxes (STB) . These instructions are to program the remote for a TV's power and volume.

START WITH TV TURNED ON

PROGRAMMING TV POWER & VOLUME

Code Search Method:

The following steps need to be done in quick succession.

- 1) Press and release the TV **(1)** button.
- 2) Press and hold the RCU SETUP **(2)** until the TV button blinks twice.
- 3) Enter **9 9 1**.
- 4) Press and release the CH+ or CH- **(4)** until the TV shuts off. When you are doing the CH + or CH -, you must do it slow enough to react when your TV shuts off. Be patient, you may have to hit CH + or CH - many times, depending on the brand of TV.
- 5) Press the POWER **(3)** button to turn the TV on.
- 6) Press the RCU SETUP **(2)** button to store the code for the TV. The TV button will blink twice. The remote is now ready to operate the TV.
- 7) Proceed to how to program lock power button.

PROGRAMMING LOCK POWER BUTTON FOR TV:

The following steps need to be done in quick succession.

- 1) Press the STB **(5)** button.
- 2) Press and hold the RCU SETUP **(2)** button until the LED button blinks twice.
- 3) Enter in **9 9 5**.
- 4) Press the Power **(3)** button.
- 5) Press the TV **(1)** button.
- 6) Press and hold the RCU SETUP **(2)** until the LED button blinks twice. Nothing happens to the TV during this process.



Please Note: Remote button placement, markings, colors may vary between different remotes.